


Touchstone™ TM522G/H
Telephony Modem

**QUICK
INSTALL
GUIDE**



INSTALLATION

START

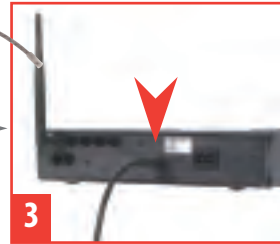

NOT INCLUDED



NOT INCLUDED

* Connection to house telephone wiring requires professional installation

BATTERY INSTALLATION

(Optional Accessory)



For mounting on drywall:

- Two #6 screws
(included)
- Two 1/4" (6mm)
drywall anchors
(not included)
- Drill with
1/4" (6mm) bit
(not included)



For mounting on plywood or studs:

- Two 1" (25mm)
wood screws—
diameter of screw
heads must be
between 3/16"
and 1/4" (4.5mm
and 6mm)
(not included)
- Drill with
1/8" (3mm) bit
(not included)



MOUNTING

WALL-MOUNTING

INSTRUCTIONS

For wall mounting your Telephony Modem, select a location within 5 ft (1.6m) of an electrical outlet. Check that the selected electrical outlet cannot be interrupted via a wall switch. When connecting the Telephony Modem to your computer, use the supplied cables. Remember to leave sufficient clearance between the bottom of the telephony modem and the floor or shelving.

Para montaje en la pared de su Modem de Telefonía, seleccione el lugar con un alcance para conexión eléctrica en un rango de 5 pies o 1.6 m. Verifique que la conexión eléctrica no este sujeto a interrupción de servicio por algún interruptor de pared. Utilice los cables proporcionados en el momento de la conexión de su computadora con el Modem de Telefonía. Recuerde de tener suficiente espacio libre entre la parte inferior del modem de telefonía y el piso o estantería.

Pour le montage mural de votre Modem de téléphonie, choisissez un endroit à moins de 1.6m d'une prise de courant. Vérifiez que la prise choisie ne soit pas contrôlée par un interrupteur mural. En reliant le Modem de téléphonie à votre ordinateur, employez les câbles fournis. Laissez un dégagement suffisant entre le fond du modem de téléphonie et le plancher ou l'étagère.


Voor wandmontage van de Telefonie Modem, kies een locatie op maximaal 1,6m van een stopcontact. Het netsnoer moet zijn aangesloten op een stopcontact zonder schakelaar. Gebruik de bijgeleverde kabels voor de verbinding tussen de Telefonie Modem en de computer. Zorg dat er voldoende ruimte is tussen de onderkant van de Telefonie Modem en de vloer / wand.

Para a montagem do seu Modem Telefônico junto a parede, selecione um local com até 1.6m (5 ft) da tomada. Verifique que a tomada elétrica selecionada não seja acionada por um interruptor de luz. Quando conectar o seu Modem Telefônico ao seu computador, utilize os cabos fornecidos. Lembre-se de deixar um espaço entre a parte de baixo do Modem Telefônico e o piso ou divisória.

לשם התקנת מודם טלפוני על קיר, בחר מיקום במרחק של 1.6 מ' משקע חשמל. ודא שלא ניתן למתק את השקע שנבחר באמצעות מתג המותקן בקיר. אם אתה מחבר את המודם הטלפוני למחשב, השתמש בכבלים שסופקו. הקפד להותיר מרווח מספיק בין חלקו התחתון של המודם הטלפוני לבין הרצפה או המדפים.

WALL MOUNTING

TEMPLATE

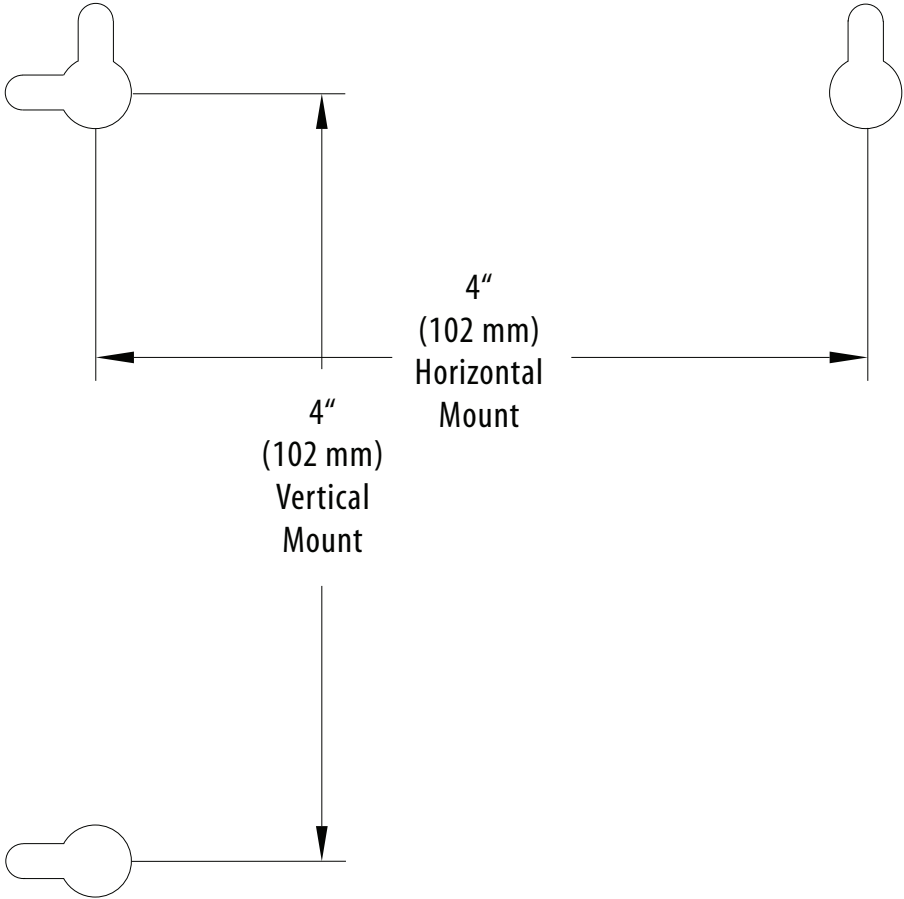

Cut along the dotted line and tape to wall.





www.arrisi.com



ARRIS
RoHS Compliant
GREEN

Touchstone™ TM552G/H Telephony Modem
Quick Install Guide
©2006 ARRIS International, Inc.
Patents Pending. All rights reserved.

All information contained in this document is subject to change without notice.

ARRIS reserves the right to make changes to equipment design or program components, as progress in engineering, manufacturing methods, or other circumstances may warrant.

ARRIS, the ARRIS logo and Touchstone are trademarks of ARRIS International Inc. All other trademarks are the property of their respective holders.

ARSVD01054
Draft 1.2